




HOW TO SET UP YOUR REMOTE

A - SIMPLESET (TV)

3 Steps to quickly program your Essence remote control

1 Locate the number key allocated to your device and brand <i>(See Below Table)</i> 	2 Hold the Magic Key until the Blue LED blinks twice 	3 Hold down the number button until your device switches off 
---	---	---

e.g. Key '7' for Samsung TV

TV

- | | |
|--------------|------------|
| 1. Hitachi | 6. Pioneer |
| 2. JVC | 7. Samsung |
| 3. LG | 8. Sharp |
| 4. Panasonic | 9. Sony |
| 5. Philips | 0. Toshiba |

For Essence 2 and up you can add additional devices other than TV via simpleset.

UNIVERSAL REMOTES
NO. 1
WORLDWIDE



SimpleSet




HOW TO SET UP YOUR REMOTE


B - SET UP BY CODE


If your brand is not listed in section A, you can set up your device by trying the codes individually.

To do this:


1. Turn your device on (not standby).

2.  Locate the brand of your device in the code list below.

3.  Hold down MAGIC until the LED blinks twice.

4.  Enter the first 4 digit code listed on your brand (e.g. 2051 for a Samsung TV).

5. The LED will blink twice and go out.

6.  Now aim the remote towards your device and press the POWER key.

7. If the device turns off, your remote is ready to use. If not, repeat steps 3-6 with the next code in the list.

** Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list. **Many many more codes listed in the user manual of the OFA remote control.***

Brand	Common Brand Code List				
TCL	3047	2675	1916	0037	0714
Akai	1326	0698	2197	0556	0714
	0706	0698	0715	04456	0264
	0178	0606	1037	0812	1248
Hitachi	1576	2676	2207	1585	0578
	0108	0744	1037	1667	0634
	2214	1163	2005	2007	0443
	0037	0556	0178	2279	
Philips	0556	1744	1506	0037	1887
	2800	2768	2214	3614	
Hisense	1576	2676	2207	1585	0578
	0108	0744	1037	1667	0634
	2214	1163	2005	2007	0443
	0037	0556	0178	2279	
Soniq	2493	2474	3168	1298	3005
Linden	3296	3528			
Changhong (CHiQ)	3296	3434			